



## HOW TO RESET AND RE-ESTABLISH A CONNECTION BETWEEN 156X AND 3656






Please follow below instructions to reset and re-establish connections between 156x scanner and 3656 cradle.

**Step 1:** For 30 seconds unplug all cables from the cradle, and take battery out of the scanner.


**Step 2:** Plug cables and insert battery back making sure all connections are firm and unwavering.

**Step 3:** Scan below barcodes in number order then wait for 30 seconds. Please insure you hear the scanner beep each time you scan. When scanning keep at least 3 inches of gap between the scanner and the barcodes.

1.	 Enter Setup
2.	 109993 Restore System Defaults
3.	 Update

**Step 4:** Notice the blue light on the cradle flash approximately 2 times every 1 second  
If faster please follow **Step 3** again.

**Step 5:** Scan the two barcodes underneath the cradle starting with *Set Connection* followed by the *Serial Number*, see example below:

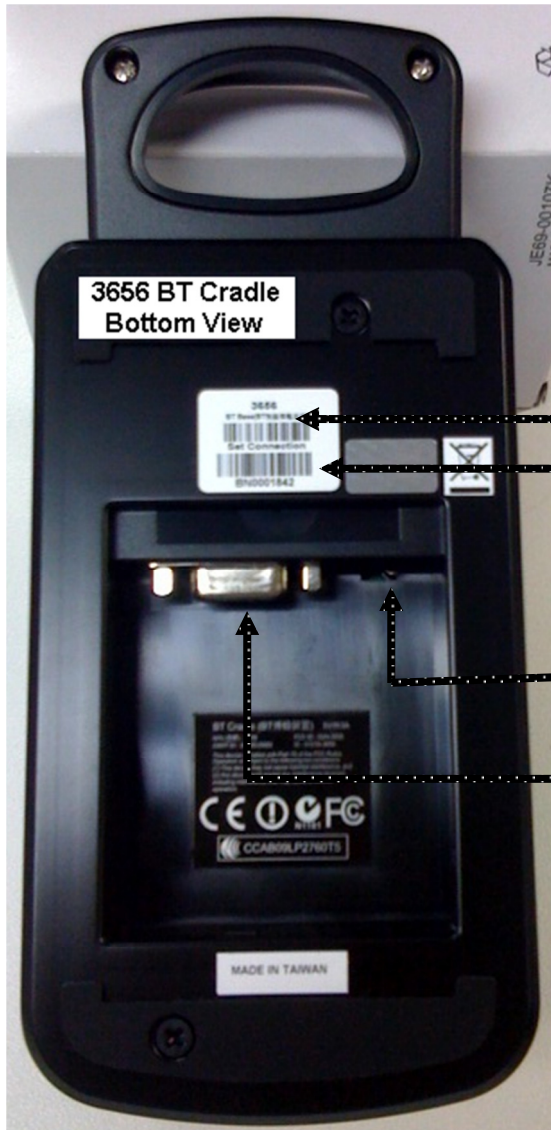

At least 2 inches away from the barcodes...

**Set Connection:** Scan first.








**Serial Number:** Scan Second.

**Power Supply Socket.**

**Communications Port - 15 Pin Female Socket.**

**Step 6:** After scanning the two barcodes you will notice a 3 beep sound indicating a successful link, also notice the Blue light on the cradle now flashing approximately 5 times in 1 second, if not, please follow **Step 3** to **Step 6** again.

**Step 7:** Scan below barcodes in number order.

1.	 Enter Setup
2.	 100005 Activate USB HID Via 3656
3.	 109906 0x06
4.	 109904 0x04
5.	 109994 Validate
6.	 100065 Transmit By: Character
7.	 Update

**Step 8:** After scanning the barcodes, you will notice a 3 beep sound indicating a successful link, also notice the Blue light on the cradle is still flashing approximately 5 times in 1 second, if not, please follow Step 3 to Step 8 again.

**Step 9: You're done!**

Open Notepad, Microsoft Word or Excel and scan a random retail barcode to see it appear on the screen.

**3656 Cradle LED light communication status.**

**Blue light flashing ~2 times every 1 second:** indicates the cradle is waiting for connection request from 156x scanner.

**Blue light flashing ~5 times every 1 second:** Indicates cradle is linked to scanner.

For support or any questions please contact:

**Marwan**

**Technical Support and Sales  
JRC International Pty Ltd  
Ph. 02 9621 3377 Fax: 02 9831 4878**

Email: [marwan@jrc.com.au](mailto:marwan@jrc.com.au)  
WEB: [www.jrc.com.au](http://www.jrc.com.au)