

7207 & 6130 Penny Picture Bookcase - Page 1


Assembly Instructions - BASE Shelf Assembly

1 x Centre divider
865mm x 150mm

2 x Dividers
370mm x 180/100mm

1 x Front Lip
865mm x 100mm

Base of Shelf
865mm x 380mm

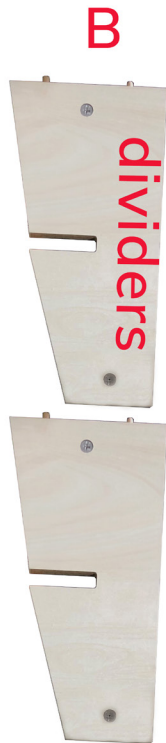

Step 1: screw all cam pins into cam pin locks



ASSEMBLE SO CAM LOCKS ON FACING ARE TO THE BACK OR UNDERSIDE OF SHELVES

Step 2: Slot Dividers (B) into centre divider (A)

Step 3: Push Base dividers into front lip.

Step 4: Part D - identify which side should be to back of shelf. Assemble part D base shelf with front lip at opposite side to the back of the shelf.

Step 5: Lock cam pins by turning cam locks 90 degrees.

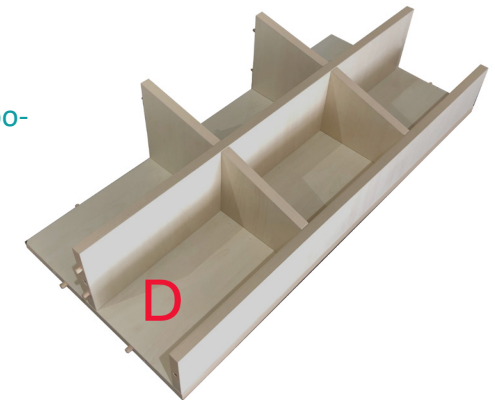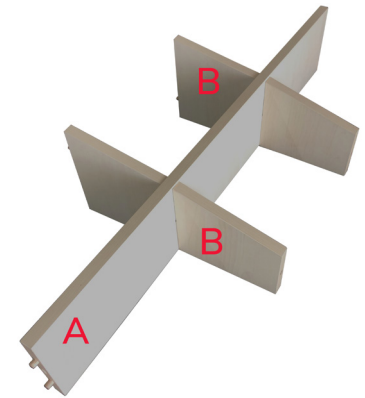

7207 & 6130 Penny Picture Bookcase - Page 2

Assembly Instructions - Middle Shelf Assembly

1 x Front Lip


865mm x 100mm

2 x Dividers

255mm x 155/100mm


1 x Base Shelf

865mm x 268mm

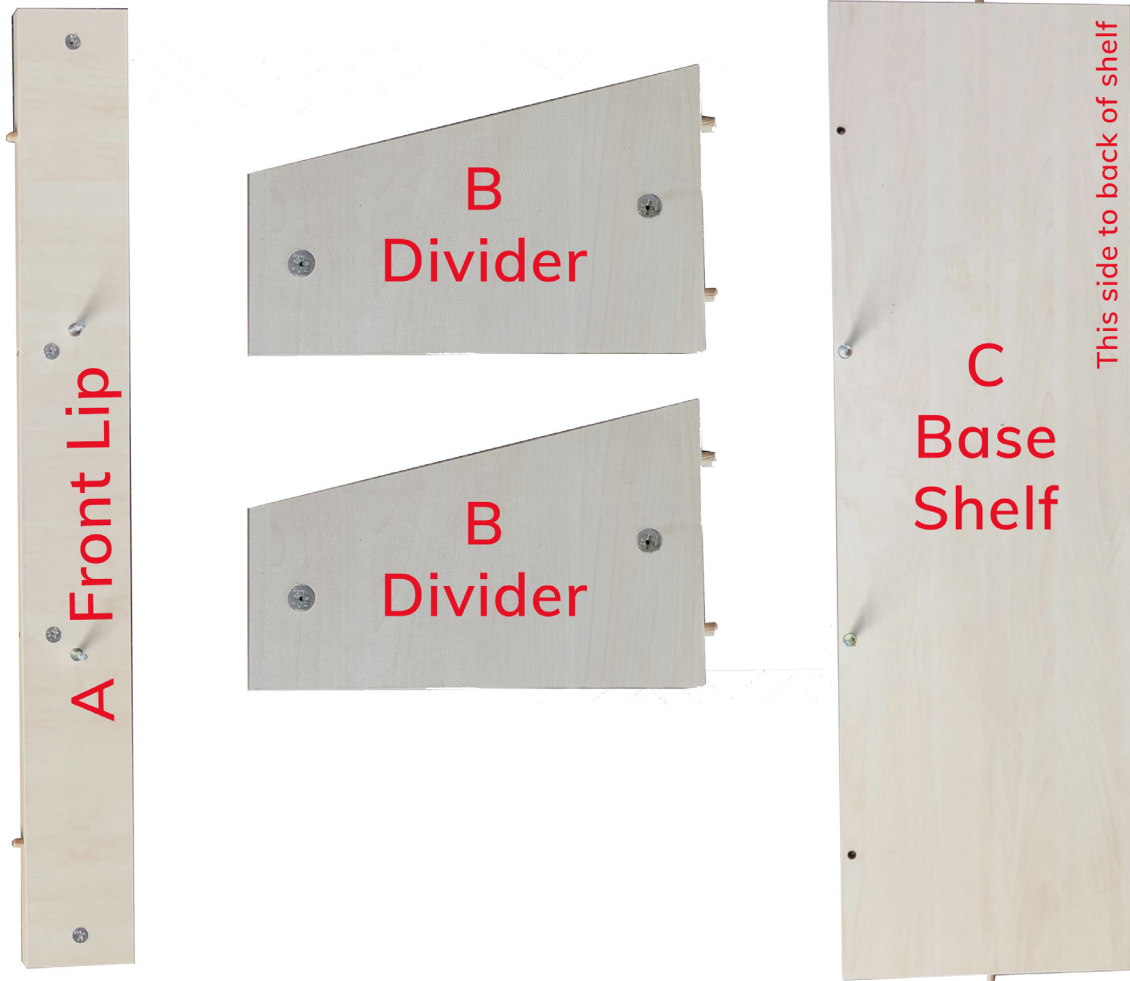


Step 1: screw all cam pins into cam pin locks

Step 2: push in dividers (B) into face panel (A)

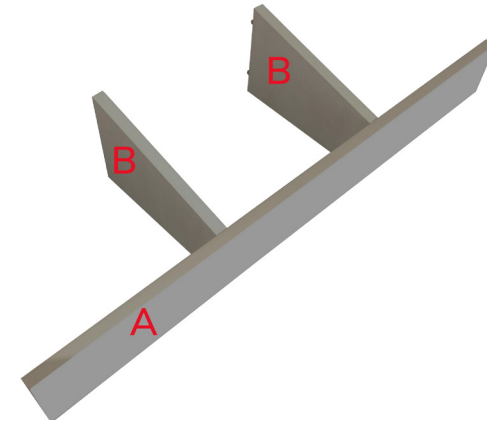



Step 3: Part C - identify which side should be to back of shelf. Back of shelf part C (opposite side to face panel). ASSEMBLE WITH CAM LOCKS TO UNDERSIDE OF SHELVES so that showing side will not have cam locks. Attach Part C base shelf onto dividers.

Step 4: Lock cam pins by turning cam locks 90 degrees.

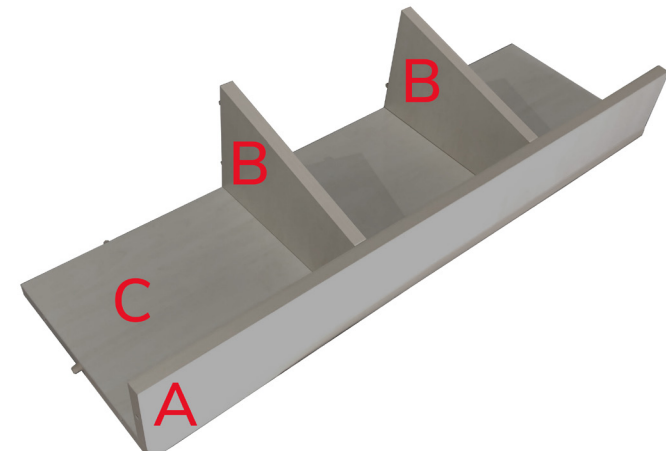

7207 & 6130 Penny Picture Bookcase - Page 3

Assembly Instructions - TOP Shelf Assembly

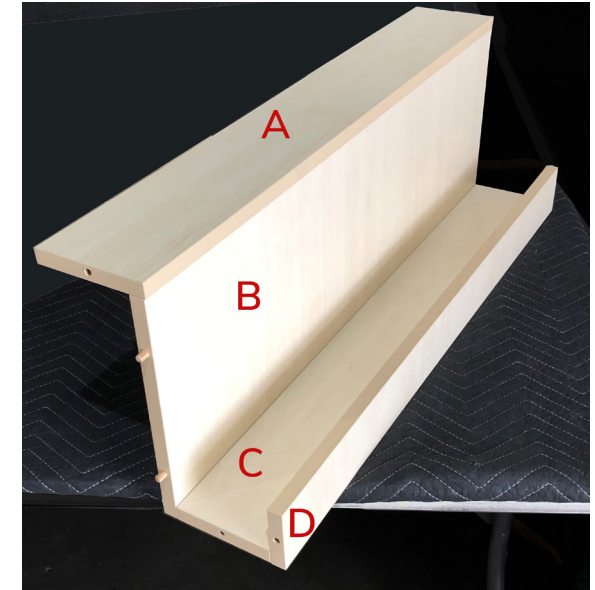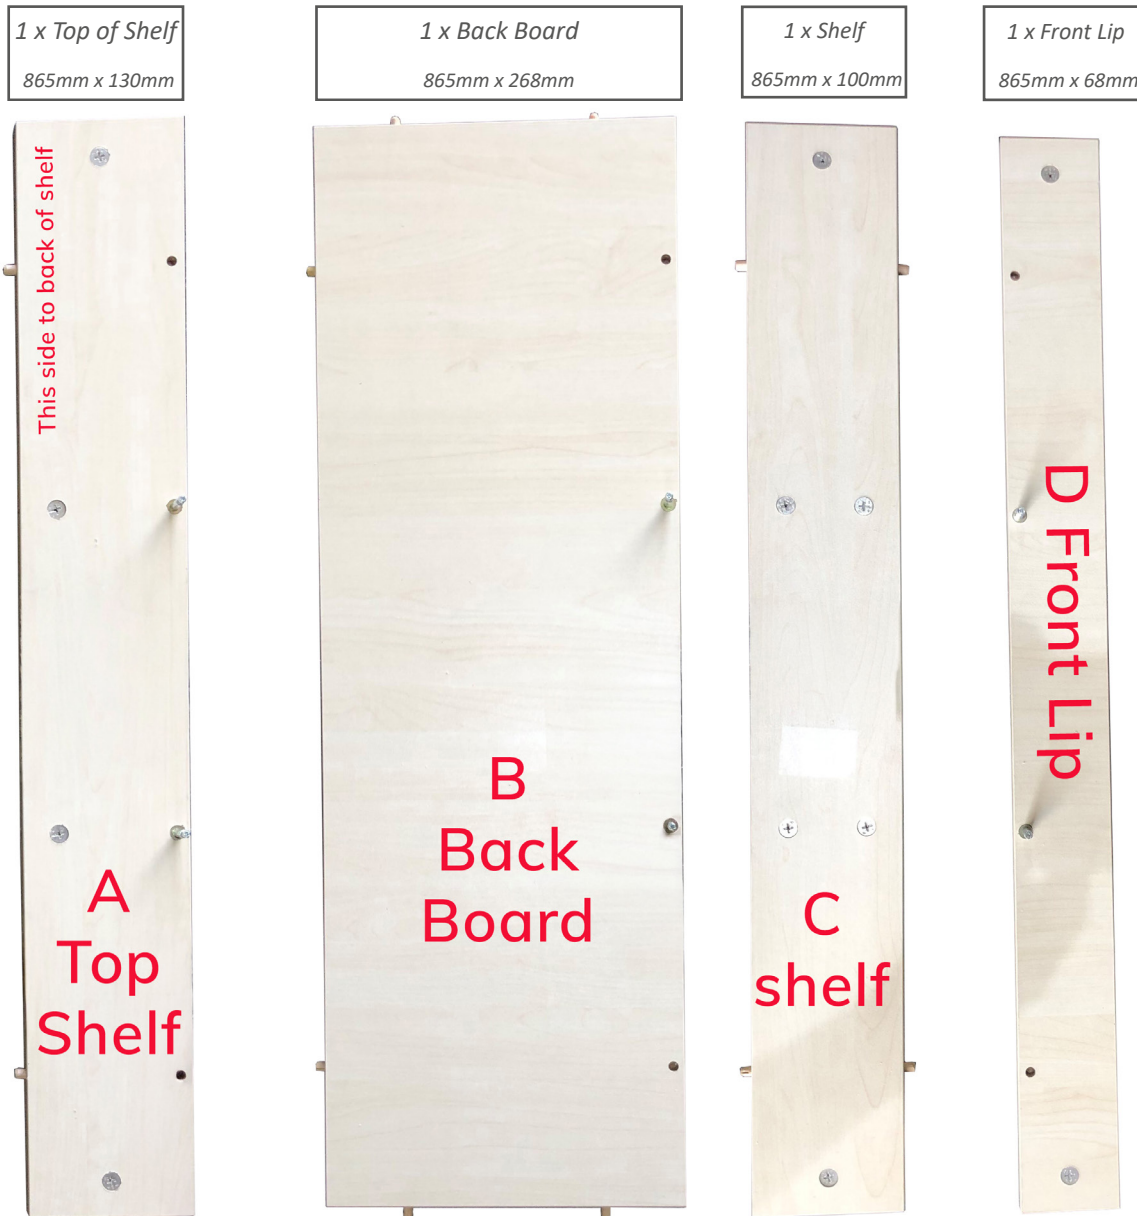

Step 1: screw all cam pins into cam pin locks

Step 2: Part A - identify which side should be to back of shelf. Assemble part B (other side to back of shelf) onto base of top shelf.

Step 3: ASSEMBLE WITH CAM LOCKS TO UNDERSIDE OF SHELVES so that showing side will not have cam locks. Attach Part C, then Part D.

Step 4: Lock cam pins by turning cam locks 90 degrees.


7207 & 6130 Penny Picture Bookcase - Page 4

Assembly Instructions - Bookcase Assembly

Images on how to assemble the final part of the bookcase on the following pages.

TIPS: before proceeding to the last part of assembly:

- 1) You will need two people for this part. You will need to lift the bookshelf part assembled to put both side panels on - ITS HEAVY - please take care with this step.
- 2) The plinth **MUST** go on before the side panels.
- 3) Make sure to lock off any cam pins

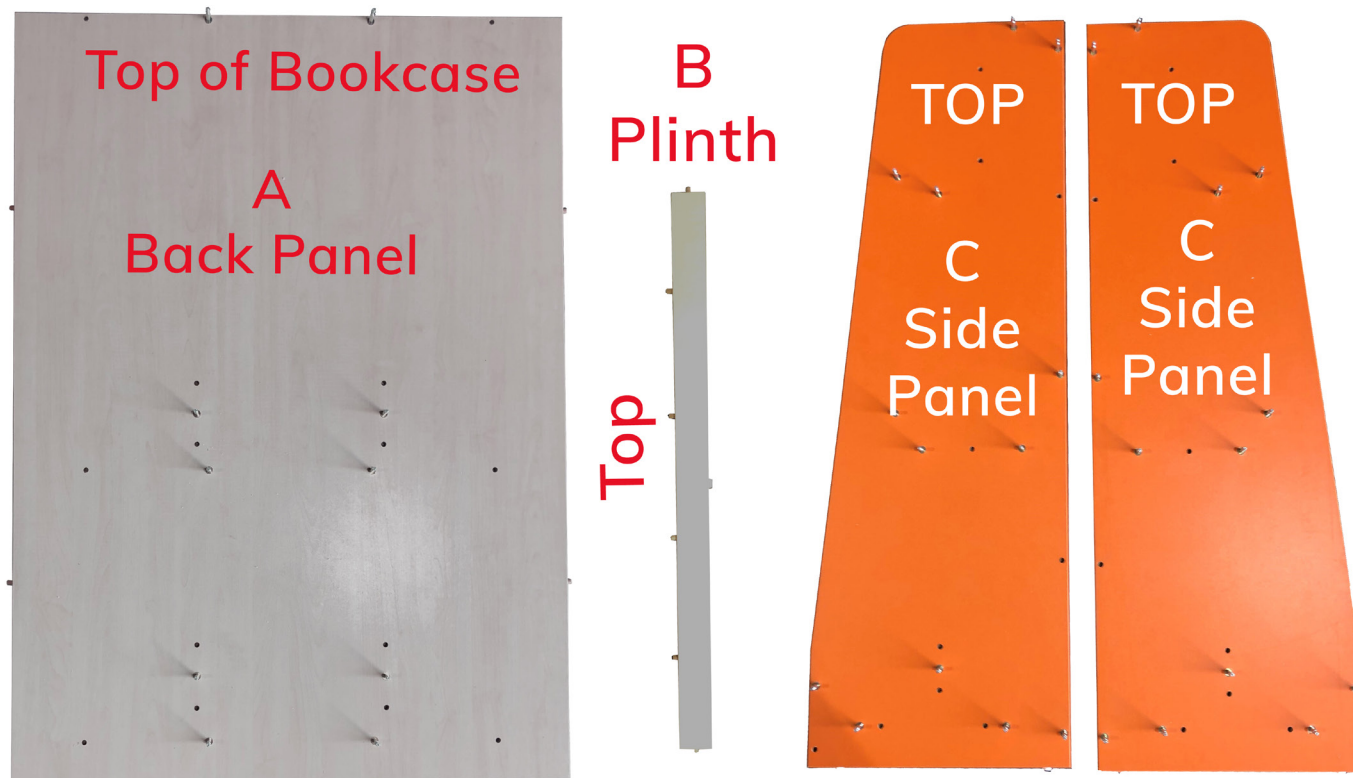

7207 & 6130 Penny Picture Bookcase - Page 5

Assembly Instructions - Bookcase Assembly

Step 1: screw all cam pins into cam pin locks

Step 2: push assembled shelves onto back board

Step 3: Lock cam pins by turning cam locks 90 degrees.



7207 & 6130 Penny Picture Bookcase - Page 6

Assembly Instructions - Bookcase Assembly


Add the plinth - before the side panels.

Step 1: screw all cam pins into cam pin locks

Step 2: assemble plinth (B) onto base of last shelf.

Step 4: attach side panels to one side then turnover and attach other side panel.

Step 3: Lock cam pins by turning cam locks 90 degrees.

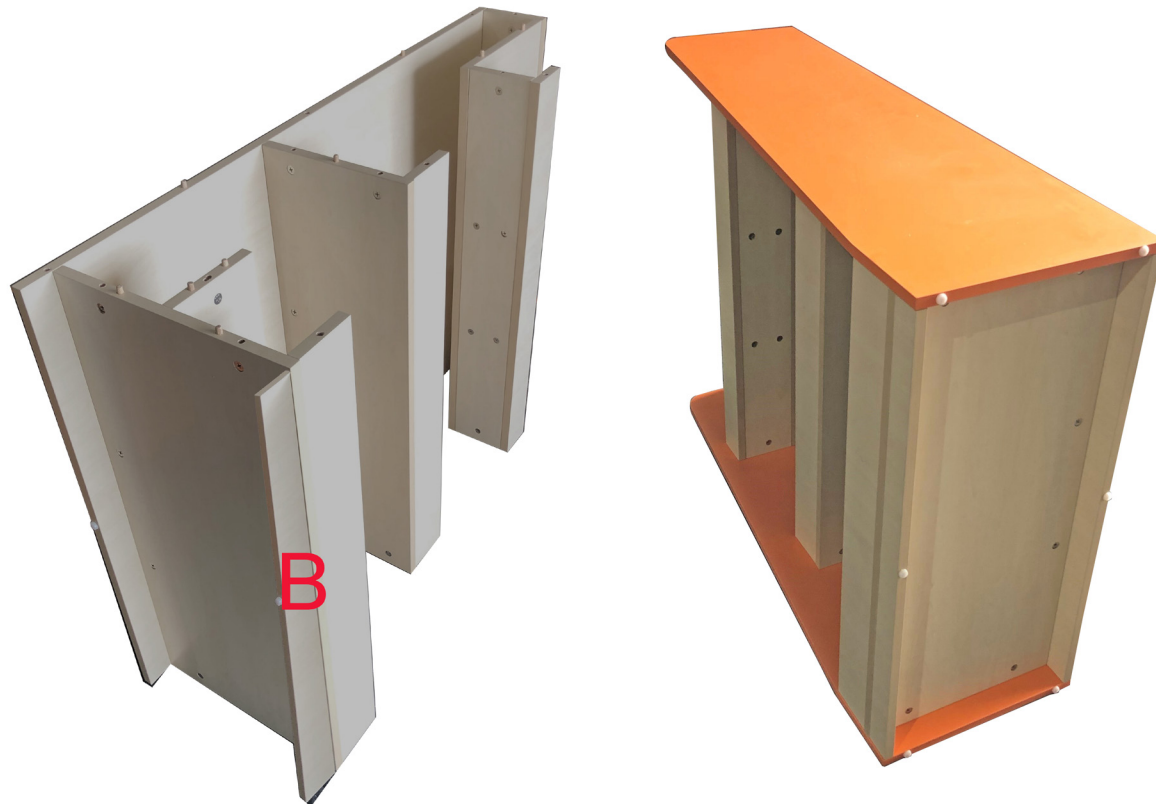

We hope these instructions have made the assembly of your bookcase easy.

If you need assistance you can contact us on:

08 9497 3197 or sales@walib.com.au

SINGLE SIDED BOOKCASES SHOULD BE ATTACHED TO A WALL.

Screws and attaching devices have not been included. Attaching this will be dependant on the wall you are attaching it too.

